

## MAGGIE MAGRP/MSGRP-C FIXTURE INSTALLATION INSTRUCTIONS

### Warnings:

- Risk of fire or electric shock.
- **Disconnect all power before installing or servicing.**
- Installation Instructions for qualified electricians only.
- Install per National Electrical Code and local regulations.
- Read Installation Instructions completely before installation.
- Failure to follow Instructions may void warranties.
- Always use correct lamp type and wattages.



THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

### FIXTURE INSTALLATION:




#### 1. 4" Octagon or Square Junction Box

Make electrical connections and fasten mounting pan with driver tray assembly to junction box (by others).  
*See details below*

2. Pull and remove trim from housing
3. Make electrical connections and slide fixture housing over driver tray assembly.
4. Secure housing by bolting to mounting yoke.
5. Reconnect and snap in trim with LED module into housing.

### JUNCTION BOX MOUNTING DETAILS

#### 4" Octagon or Square Junction Box

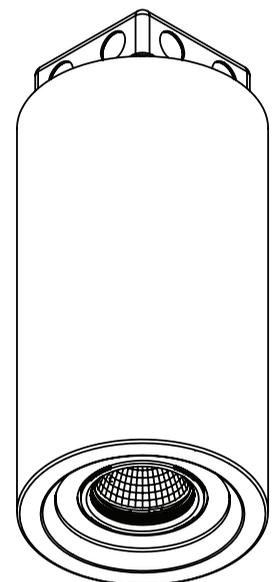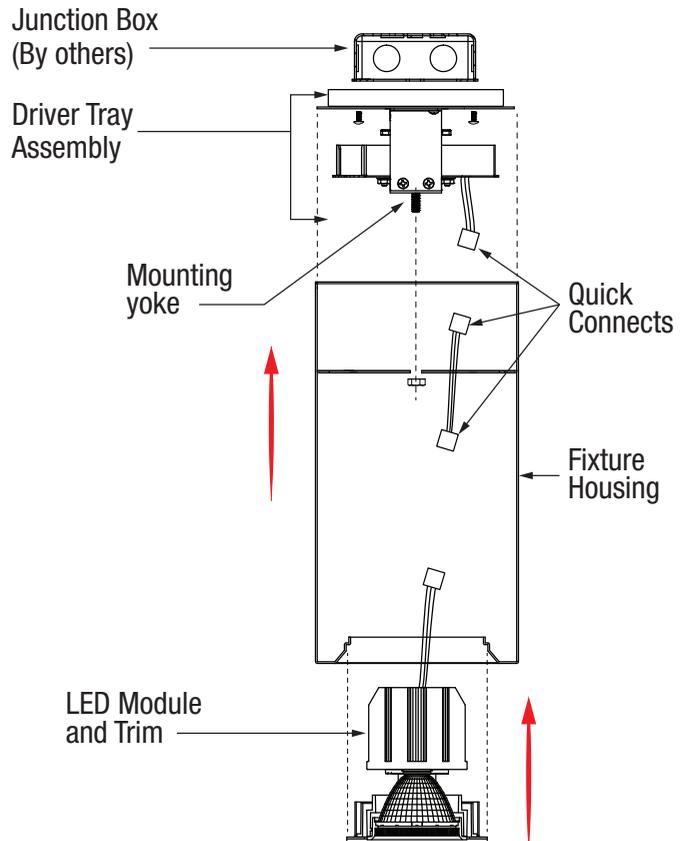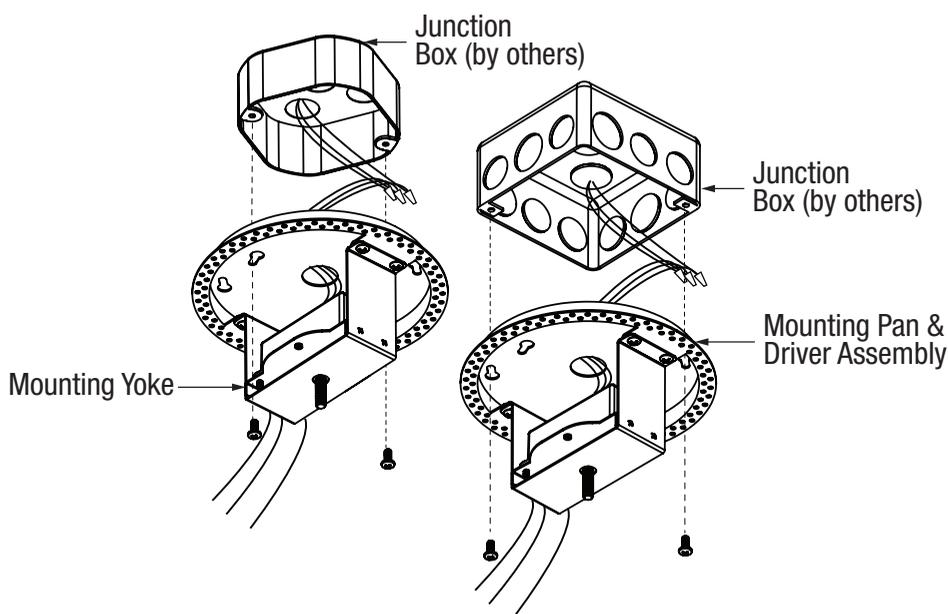

## MAGGIE MAGRP/MSGRP-C FIXTURE INSTALLATION INSTRUCTIONS

### Warnings:

- Risk of fire or electric shock.
- **Disconnect all power before installing or servicing.**
- Installation Instructions for qualified electricians only.
- Install per National Electrical Code and local regulations.
- Read Installation Instructions completely before installation.
- Failure to follow Instructions may void warranties.
- Always use correct lamp type and wattages.



THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

### FIXTURE INSTALLATION:

#### 1. 4" Octagon Junction Box


With canopy assembly in place, pull and remove trim from housing

2. Make electrical connections and slide fixture housing over driver tray assembly.
3. Secure housing by bolting to mounting yoke.
4. Reconnect and snap in trim with LED module into housing.

### 5 WIRE COLOR CODE:

**BLACK = HOT**  
**WHITE = NEUTRAL**  
**GREEN = GROUND**  
**PURPLE = 0-10V DIM +**  
**GREY = 0-10V DIM -**

**NOTE: ALL WORK MUST BE DONE WITH CIRCUIT OFF AND COMPONENTS SHOULD NOT BE INSTALLED WHEN ENERGIZED.**

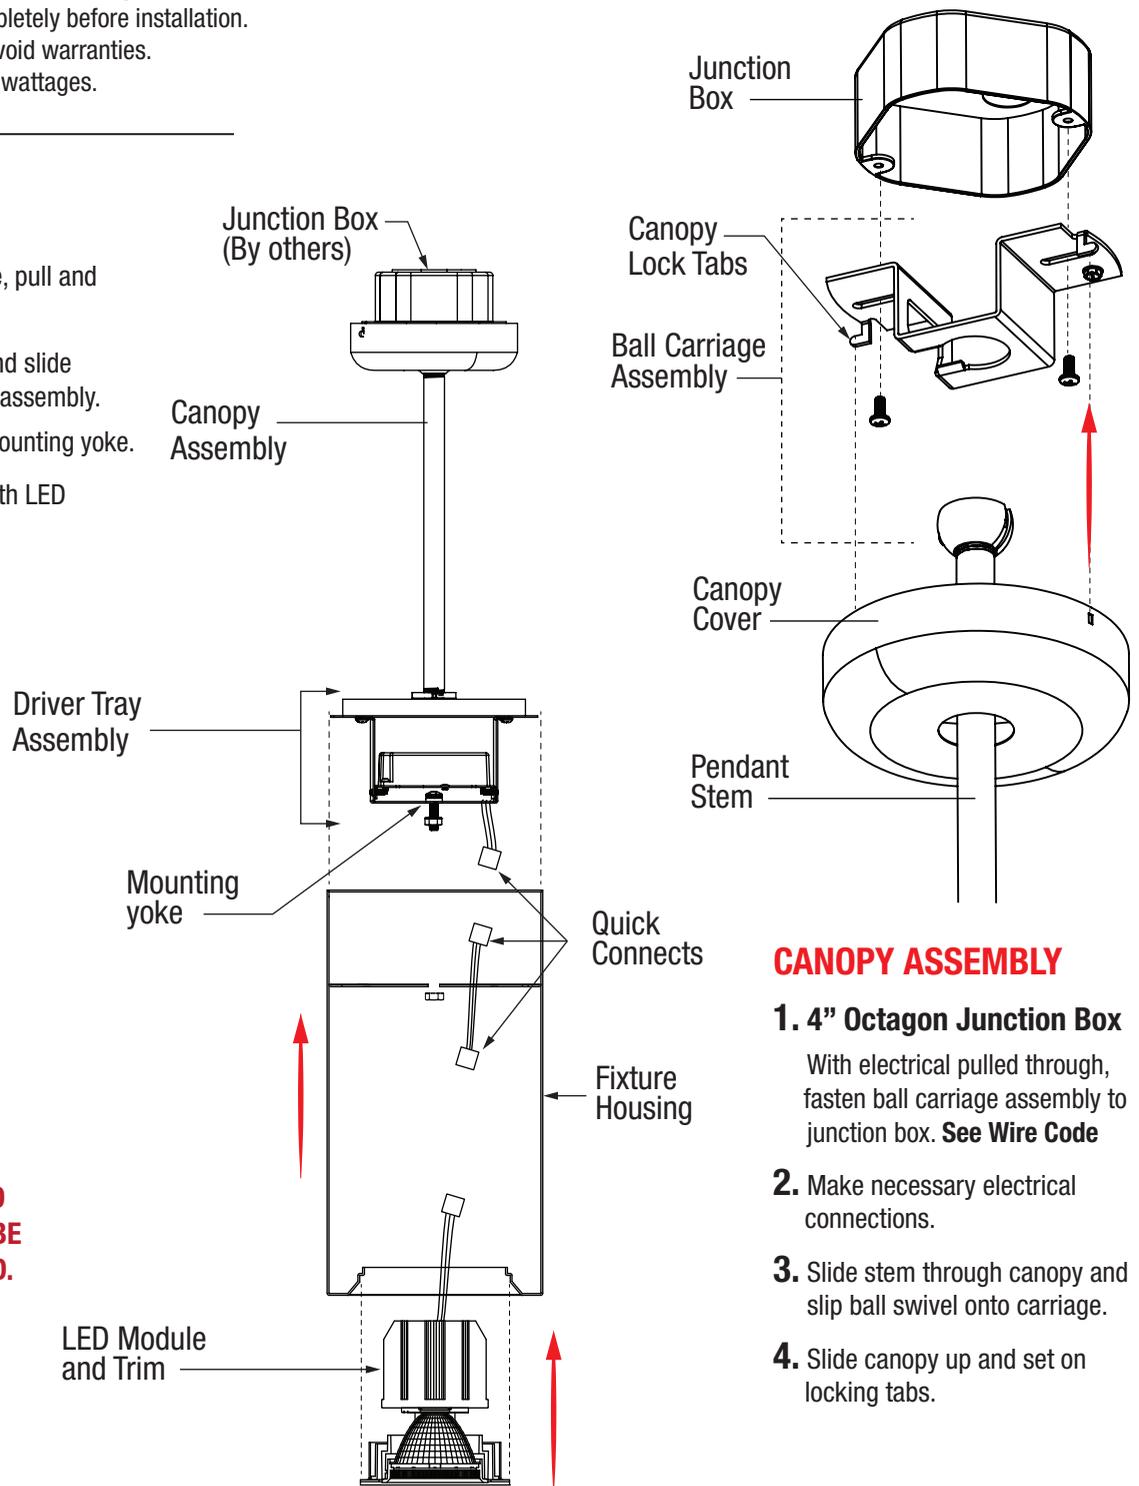

### CANOPY ASSEMBLY

#### 1. 4" Octagon Junction Box

With electrical pulled through, fasten ball carriage assembly to junction box. **See Wire Code**

2. Make necessary electrical connections.
3. Slide stem through canopy and slip ball swivel onto carriage.
4. Slide canopy up and set on locking tabs.